



## Tsunami™ SoundCar™ Wiring Diagrams

### SoundCar Wiring Diagram

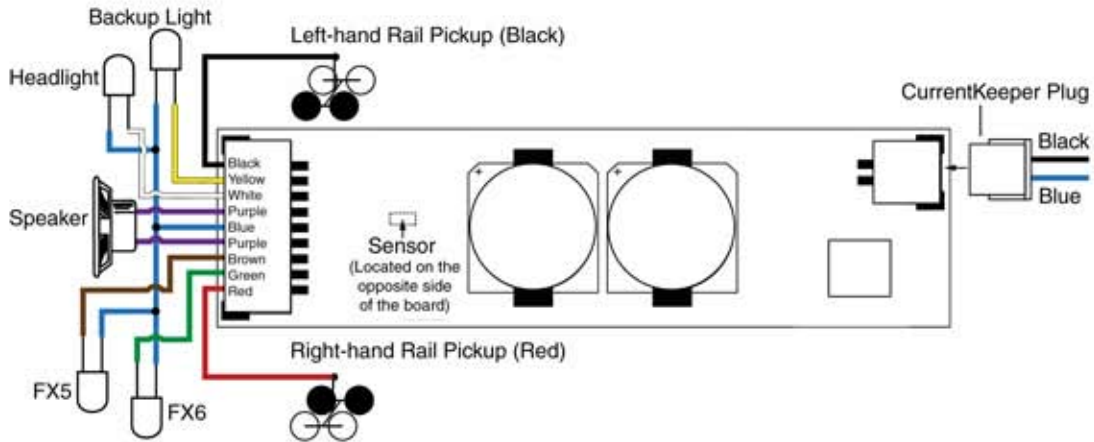

### Installation Example

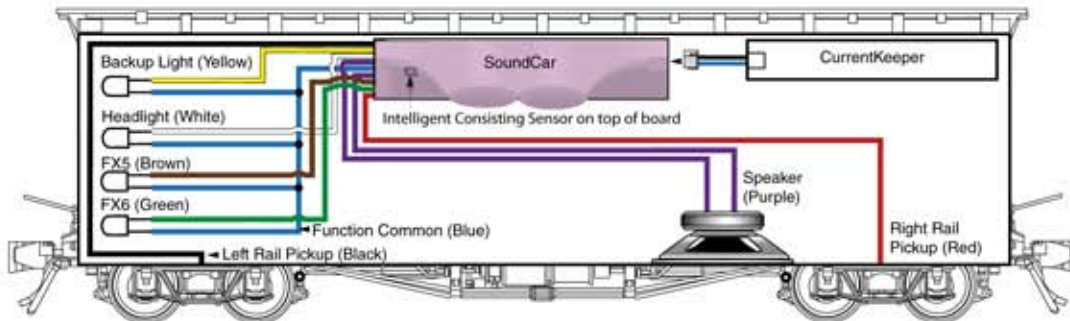

Note the location of the SoundCar on the roof of the model with the Intelligent Consisting sensor is facing outward for accessibility.